

Lecture # 3.2

Manufacturing Considerations in Design

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

1

1

Manufacturing Considerations in Design

A machine element, after design, requires to be manufactured to give it a shape of a product.

Therefore, in addition to standard design practices like,

Selection of proper material,

Ensuring proper strength and

Dimension to guard against failure,

a designer should have knowledge of basic manufacturing aspects.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

2

2

Manufacturing Considerations in Design

From manufacturing view point it is very necessary to assign a proper size to a machine element.

for example, a shaft may be designed to diameter of, say, 50 mm.

This means, the nominal diameter of the shaft is 50 mm,

but

the actual size will be slightly different,

because

it is impossible to manufacture a shaft of exactly 50 mm diameter,

no matter what machine is used.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

3

3

Manufacturing Considerations in Design

In case the machine element is a mating part with another one,

then dimensions of both the parts become important,

because

they dictate the nature of assembly.

The allowable variation in size for the mating parts is called limits

and

the nature of assembly due to such variation in size is known as fits.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

4

4

Manufacturing Considerations in Design

Limits

Fig. 1 explains the terminologies used in defining tolerance and limit.

The zero line, shown in the figure, is the basic size or the nominal size.

The definition of the terminologies is given below.

For the convenience, shaft and hole are chosen to be two mating components.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

5

5

Manufacturing Considerations in Design

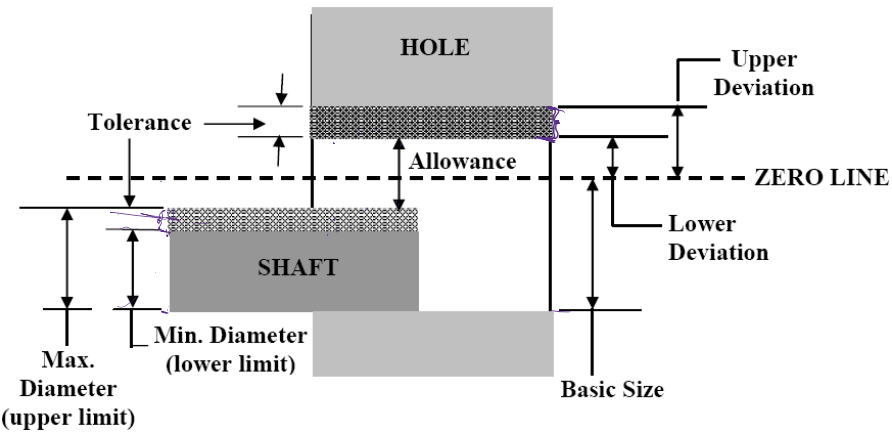


Fig. 1. Interrelationship between tolerances and limits

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

6

6

Manufacturing Considerations in Design

Tolerance

Tolerance is the difference between maximum and minimum dimensions of a component, i. e., between upper limit and lower limit.

Depending on the type of application, the permissible variation of dimension is set as per available standard grades.

Tolerance is of two types,

1. Bilateral -

When tolerance is present on both sides of nominal size, it is termed as bilateral;

2. Unilateral -

unilateral has tolerance only on one side.

2/4/2026


Vijay Kumar Karma, IET, DAVV, Indore

7

7

Manufacturing Considerations in Design

The Fig.2 shows the types of tolerance.

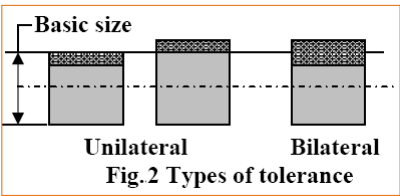

50^0_{-y} , 50^{+x}_0 , 50^{+x}_{-y} is a typical example of specifying tolerance for a shaft of nominal diameter of 50 mm.

First two values denote unilateral tolerance and the third value denotes bilateral tolerance.

Values of the tolerance are given as x and y respectively.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

8

8

Manufacturing Considerations in Design

Allowance

It is the difference of dimension between two mating parts.

Upper deviation

It is the difference of dimension between the maximum possible size of the component and its nominal size.

Lower deviation

Similarly, it is the difference of dimension between the minimum possible size of the component and its nominal size.

Fundamental deviation

It defines the location of the tolerance zone with respect to the nominal size.

For that matter, either of the deviations may be considered.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

9

9

Manufacturing Considerations in Design

Fit System

We have learnt above that a machine part when manufactured has a specified tolerance.

Therefore, when two mating parts fit with each other, the nature of fit is dependent on the limits of tolerances and fundamental deviations of the mating parts.

The nature of assembly of two mating parts is defined by three types of fit system,

Clearance Fit,

Transition Fit, and

Interference Fit

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore


10

10

Manufacturing Considerations in Design

Clearance Fit

In this type of fit, the shaft of largest possible diameter can also be fitted easily even in the hole of smallest possible diameter.

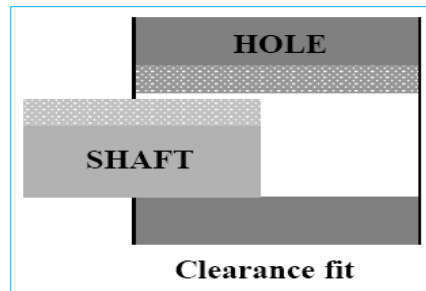

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

11


11

Manufacturing Considerations in Design

Transition Fit

In this case, there will be a clearance between the minimum dimension of the shaft and the minimum dimension of the hole.

If we look at the figure carefully, then it is observed that if the shaft dimension is maximum and the hole dimension is minimum then an overlap will result and this creates a certain amount of tightness in the fitting of the shaft inside the hole.

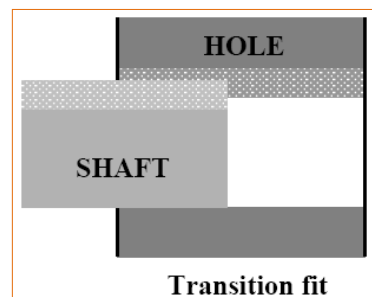

Hence, transition fit may have either clearance or overlap in the fit.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

12

12


Manufacturing Considerations in Design

Interference Fit

In this case, no matter whatever may be the tolerance level in shaft and the hole,

there is always a overlapping of the mating parts.

This is known as interference fit.
Interference fit is a form of a tight fit.

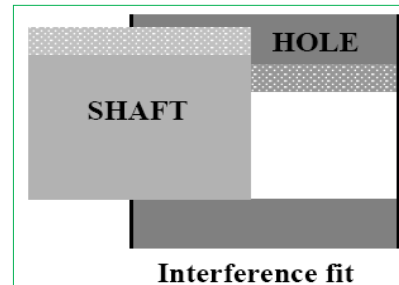

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

13

13

Manufacturing Considerations in Design

There are two ways of representing a Fit system.

One is the hole basis and the other is the shaft basis.

In the hole basis system, the dimension of the hole is considered to be the datum, whereas,

in the shaft basis system dimension of the shaft is considered to be the datum.

The holes are normally made by drilling, followed by reaming.

Therefore, the dimension of a hole is fixed due to the nature of the tool used.

On the contrary, the dimension of a shaft is easily controllable by standard manufacturing processes.

For this reason, the hole basis system is much more popular than the shaft basis system.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

14

14

Manufacturing Considerations in Design

Standard limit and fit system

Fig.4 shows the schematic view of a standard limit and fit system.

In this figure tolerance is denoted as IT and it has 18 grades; greater the number, more is the tolerance limit.

The fundamental deviations for the hole are denoted by capital letters from A and ZC, having altogether 25 divisions.

Similarly, the fundamental deviations for the shaft is denoted by small letters from a to zc.


2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

15

15

Manufacturing Considerations in Design

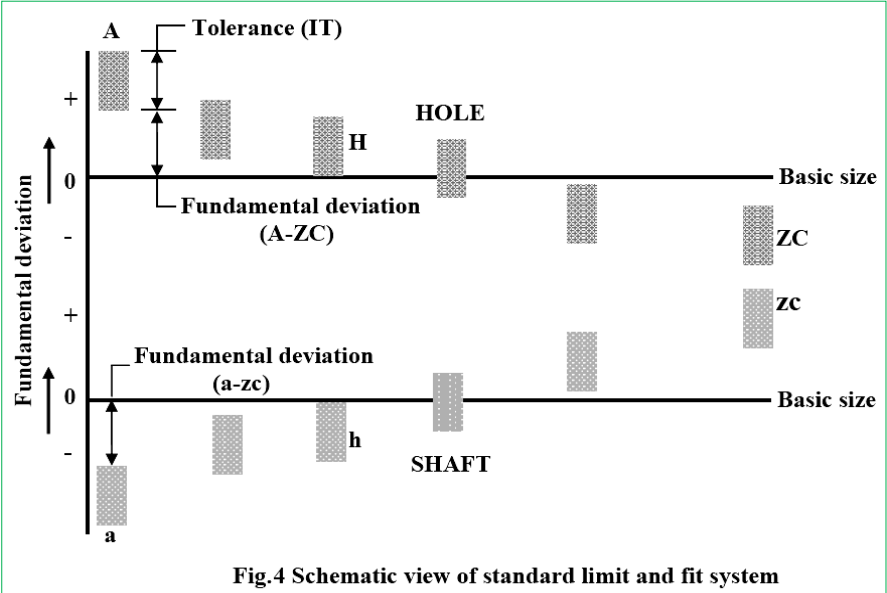

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

16

16

Manufacturing Considerations in Design

Here H or h is a typical case, where the fundamental deviation is zero having a unilateral tolerance of a specified IT grade.

Therefore, in standard limits and fit system we find that,

Standard tolerances

18 grades: IT01, IT0 and IT1-IT16

Fundamental deviations

25 types: A- ZC (For holes)

a- zc (For shafts)

The values of standard tolerances and fundamental deviations can be obtained by consulting design handbook.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

17

17

Manufacturing Considerations in Design

It is to be noted that the choice of tolerance grade is related to the type of manufacturing process;

for example, attainable tolerance grade for lapping process is lower compared to plain milling.

Similarly, choice of fundamental deviation largely depends on the nature of fit, running fit or tight fit etc.

The approximate zones for fit are shown in Fig. 5.

Manufacturing processes involving lower tolerance grade are generally costly.

Hence the designer has to keep in view the manufacturing processes to make the design effective and inexpensive.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

18

18

Manufacturing Considerations in Design

Sample designation of limit and fit, 50H6/g5.

The designation means that the nominal size of the hole and the shaft is 50 mm.

H is the nature of fit for the hole basis system and its fundamental deviation is zero.

The tolerance grade for making the hole is IT6.

Similarly, the shaft has the fit type g, for which the fundamental deviation is negative,


that is, its dimension is lower than the nominal size, and tolerance grade is IT5.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

19

19

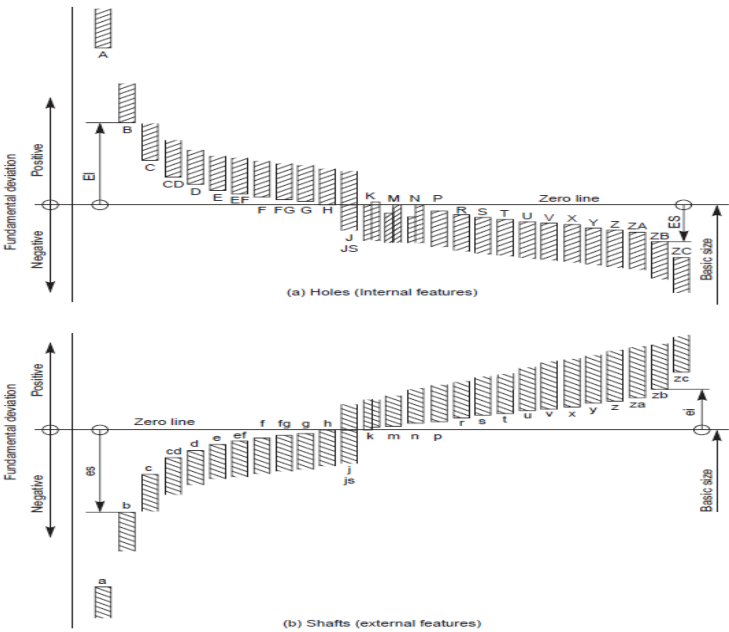


2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

20

20

Manufacturing Considerations in Design

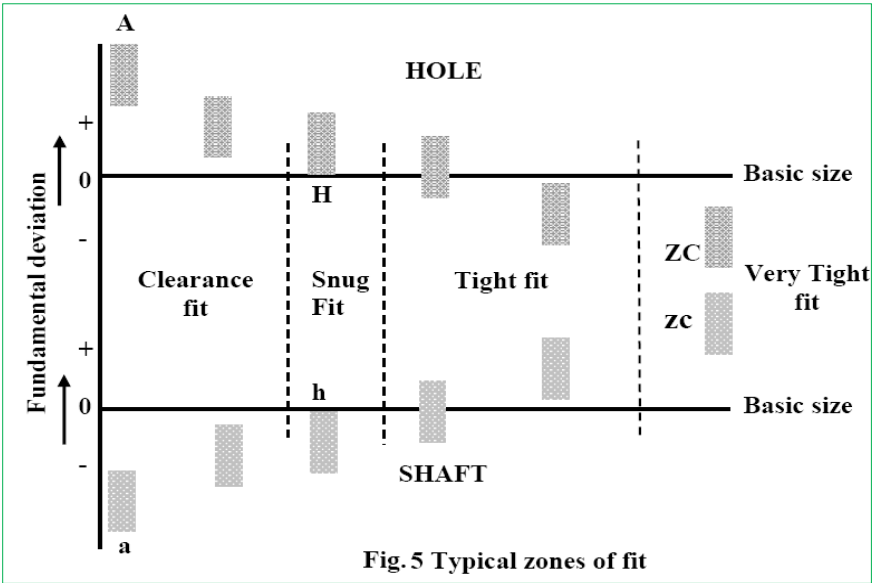

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

21

21

References

ABDULLA SHARIF, Design of Machine Elements, Dhanpat Rai Publications (P) Ltd, New Delhi, 1995.

V. B. Bhandari, Design of Machine Elements, Third Ed., The McGraw-Hills Companies, New Delhi

R. S. KHURMI and J.K.GUPTA, A Textbook of Machine Design, S.Chand and company ltd., New Delhi, 2000.

<http://www.nptel.iitm.ac.in>

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

22

22