

Lecture # 5.4

Cotter Joints - Gib and Cotter

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

1

1

Cotter Joints


Cotter Joint with Gib:

This joint is generally used to connect two rods of square or rectangular cross-section.

To make the joint, one end of the rod is formed into a U-fork, into which, the end of the other rod fits in.

When a cotter is driven-in, the friction between the cotter and straps of the U-fork, causes the straps to open.

This is prevented by the use of a gib.

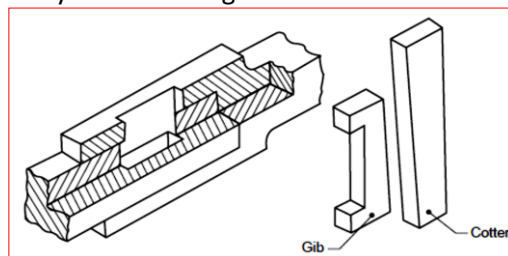

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore


2

2

Cotter Joints

Cotter Joint with Gib:

A gib is also a wedge shaped piece of rectangular cross-section with two rectangular projections called lugs.

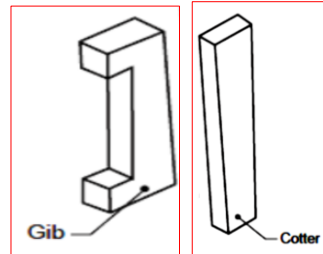

One side of the gib is tapered and the other straight.

The tapered side of the gib bears against the tapered side of the cotter such that, the outer edges of the cotter and gib as a unit are parallel.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

3

3

Cotter Joints

Cotter Joint with Gib:

This facilitates making of slots with parallel edges, unlike the tapered edges in case of ordinary cotter joint.

Further, the lugs bearing against the outer surfaces of the fork, prevents the opening tendency of the straps.

For making the joint, first the gib is placed in position and then the cotter is driven-in.

2/4/2026


Vijay Kumar Karma, IET, DAVV, Indore

4

4

Cotter Joints

Cotter Joint with Gib:

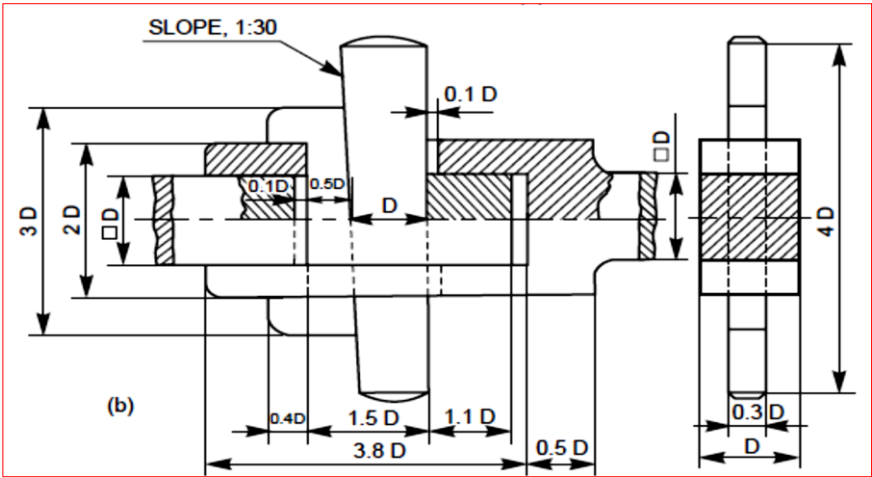

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

5

5

Cotter Joints

Design of Gib and cotter joint

Consider a gib and cotter joint for square rods as shown in Fig.

All components of the joint are assumed to be of the same material.

If the allowable stresses in **tension**, **compression** and **shear** for all the components be σ_t , σ_c and τ respectively,

Let P = Load carried by the rods,


x = Each side of the rod,

B = Total width of gib and cotter,

B_1 = Width of the strap,

t = Thickness of cotter,

t_1 = Thickness of the strap,

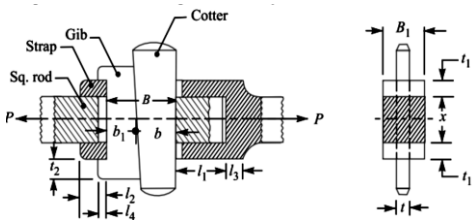

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

6

6



Cotter Joints

Design of Gib and cotter joint

we may write the following failure criteria:

1. Tension Failure of rod at square end x

$$x^2 \sigma_t = P$$

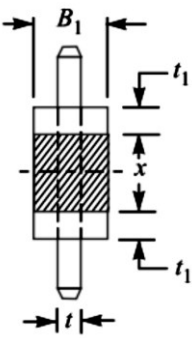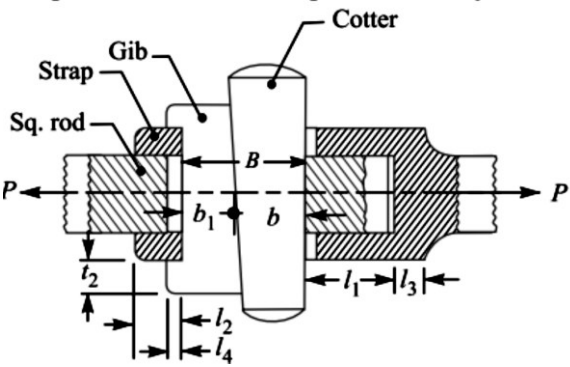

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore


7

7

Cotter Joints

2. Tension Failure of rod across slot

$$(x^2 - xt) \sigma_t = P$$

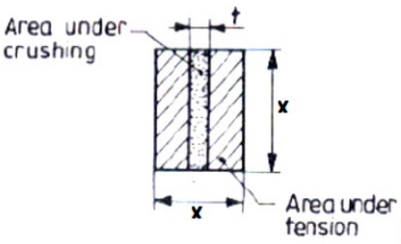

3. Compression / Crushing Failure of rod and Cotter

$$xt \sigma_c = P$$

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore


8

8

Cotter Joints

4. Tension Failure of Strap/Fork across slot

$$2(xt_1 - tt_1)\sigma_t = P \text{ or } 2t_1(x - t)\sigma_t = P$$

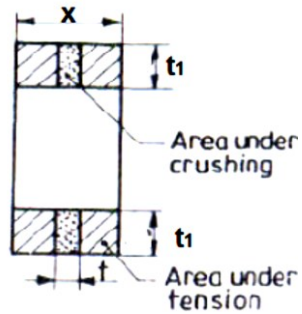

5. Compression / Crushing Failure of Strap/Fork across slot

$$2tt_1\sigma_c = P$$

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

9

9


Cotter Joints

6. Shear Failure of Gib and Cotter

$$2Bt\tau = P$$

7. Tension Failure of Strap/Fork at the weakest section

$$2xt_1\sigma_t = P$$

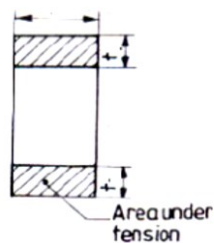

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore


10

10

Cotter Joints


8. Shear Failure of rod end

$$2l_1x\tau = P$$

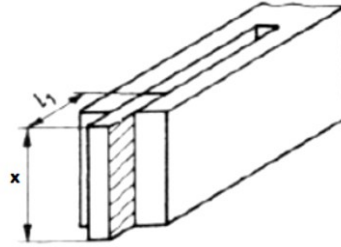

9. Shear Failure of Strap/Fork end

$$4l_2t_1\tau = P$$

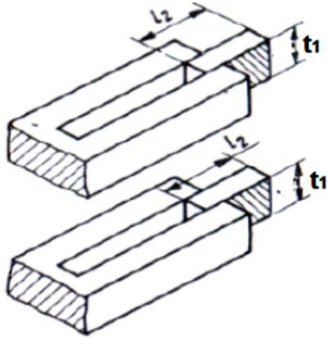

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

11

11

Cotter Joints

Problem 3

Design & Draw a Gib & cotter joint to resist a safe tensile load of 50 kN. The material of the Gib, cotter & rod is same for which the allowable safe stress are $\sigma_t = 25 \text{ N/mm}^2$, $\sigma_s = 20 \text{ N/mm}^2$ & $\sigma_c = 60 \text{ N/mm}^2$.

2/4/2026

Vijay Kumar Karma, IET, DAVV, Indore

12

12

References

ABDULLA SHARIF, Design of Machine Elements, Dhanpat Rai Publications (P) Ltd, New Delhi, 1995.

V. B. Bhandari, Design of Machine Elements, Third Ed., The McGraw-Hills Companies, New Delhi

R. S. KHURMI and J.K.GUPTA, A Textbook of Machine Design, S. Chand and company ltd., New Delhi, 2000.

<http://www.nptel.iitm.ac.in>

<https://machinedesign.top/content/Introduction%20to%20Machine%20Design>